

Two-Rock

Jet

22/35

OWNERS MANUAL

Dear Customer,

Thank you for your purchase of a *Two-Rock* amplifier from Premier Builders Guild.

As a discerning guitarist, you know the road to great tone begins with great components.

Our Classic Design, carefully selected parts and hand-built approach combine to make an extremely versatile instrument.


Please take the time to read this manual. We hope it will answer any questions that you may have.

We extend a warm welcome to you as a member of a select group of musicians who have chosen a *Two-Rock* amplifier.

Important Safety Instructions

1. Read these instructions
2. Keep these instructions
3. Heed all warnings
4. Follow all instructions
5. Do not use this apparatus near water
6. Clean only with dry cloth
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
8. Do not install near any heat sources such as radiators, heat registers, plugs, and the point where they exit from the apparatus
9. Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the apparatus
10. Only use attachments/accessories specified by the manufacturer
11. Unplug this apparatus during lightning storms or when unused for long periods of time
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped
13. CAUTION: To disconnect the unit completely from the MAINS, unplug the unit. Turning the power switch off does not disconnect the unit completely from the MAINS.

Front Panel Functions

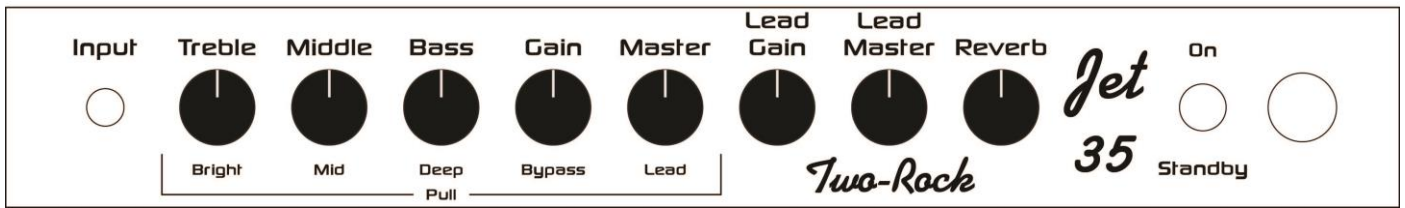


- 1. Input Jack-** High impedance input to the amplifier. Plug in your instrument here.
- 2. Push/Pull Treble Control-** Adjusts the high frequency response. In the full counter-clockwise position, high frequencies are cut. In the full clockwise position, high frequencies are allowed to pass to the gain stage. When the knob is in the “out” position, the high frequency response is boosted. This is most effective when the input gain is set at 12 o’clock or lower. The effect is less dramatic as the gain control is adjusted past the 12 o’clock position.
- 3. Push/Pull Mid Control-** Adjusts the mid-range response. In the full counter-clockwise position, the tone will be somewhat “scooped” of mid-range response, emphasizing the highs and lows. In the full clockwise position, mid-range frequencies are allowed to pass to the gain stage. When the knob is in the “out” position, the mid frequencies are boosted.
Mid pull not available in 22 watt version!
- 4. Push/Pull Bass Control-** Adjusts the bass response. In the full counter-clockwise position, low frequencies are cut. In addition, the response of the treble and mid-range controls is greatly reduced. In the full clockwise position, low frequencies are allowed to pass to the gain stage. When the knob is in the “out” position, the low and low-mid frequencies are boosted. This is a low frequency contour switch, changing the low and low-mid response.
Mid pull not available in 22 watt version!
- 5. Gain-** Adjusts the overall gain of the amplifier. Start with this control in the 12 o’clock position.
Pull function Bypass: This feature cuts the EQ section out of the signal path allowing more input signal to hit the gain stage. With it engaged it will affect the natural Highs and Mids of the tube at the input section. Function is only accessible by footswitch on 22 watt version!
- 6. Master Volume-** Adjusts the output level of the amplifier. Also acts as the send level control for any effects inserted in the loop. **Pull function Lead Channel:** Function is only accessible by footswitch on 22 watt version!
- 7. Lead Gain-** Adjusts the input level (gain) of the lead channel.
- 8. Lead master-** Adjusts the output level of the lead channel.
- 9. Reverb-** The front panel reverb control is the return, or mix, control. The reverb effect is defeated with this control in the full counter clockwise position. Use in conjunction with the reverb drive control (see REAR PANEL FUNCTIONS, next page).

10. **Stand-by Switch**- Should be in the “down” or “stand-by” position when you apply power to the unit. After a few seconds, place the switch in the “up” position to use the amplifier. You may leave the unit “powered up” and place this switch in the “stand-by” position to mute the output.

11. **Indicator Lamp**- This lamp will illuminate when the power switch is in the “up” position, indicating the unit is receiving A/C power.

Rear Panel Functions

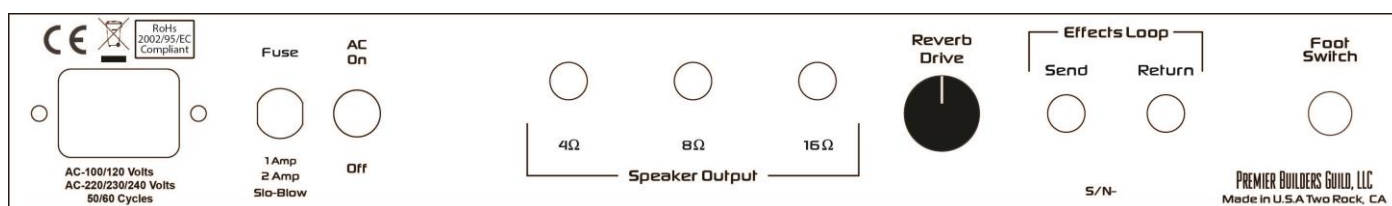

1. **A/C Input**- Connects the amplifier to A/C power via the power cord supplied. Please check to make sure you have the correct cable for the voltage rating of your country.

2. **Fuse**- See Fuse Chart

3. **Power Switch**- Turns power on.

4. **Speaker Output Jacks**- There are 3 speaker output jacks; 4, 8, and 16 ohms. NEVER OPERATE YOUR AMPLIFIER WITHOUT A PROPER SPEAKER LOAD CONNECTED. Be sure to match the impedance of your cabinet with the impedance (output) of the amplifier.

5. **Reverb Drive**- The reverb drive control adjusts the signal level applied to the reverb unit. Low settings will provide a smooth, short decay effect, simulating small to medium rooms. Higher settings will increase the decay time. At maximum clockwise rotation, an extremely wet reverb effect can be created. This control is used in conjunction with the front panel (return) control (see FRONT PANEL FUNCTIONS, previous page). The reverb effect is defeated with this control in the full counterclockwise position.

6. **Effects Send**- Use this jack to send the amplifiers signal to outboard effects.

7. **Effects Return**- Use this jack to connect the output of your effects to the amplifier.

8. **Footswitch Jack**- The footswitch connects here. The clean/lead and tone bypass functions can only be activated via the footswitch.

Fuse Chart

All Fuses are 3AG Type 250 Volt, SLO-BLO

Export 100 Volt

2A – 22/35 Watt

2.5 - 50 Watt

3.2 - 100 Watt

Domestic Fuses:

2A – 22/35 Watt

2.5 - 50 Watt

3.2 - 100 Watt


Export 220, 230, 240 Fuses:

1A-22/35 Watt


1.6 - 50 Watt

2.5 - 100 Watt

FOOTSWITCH

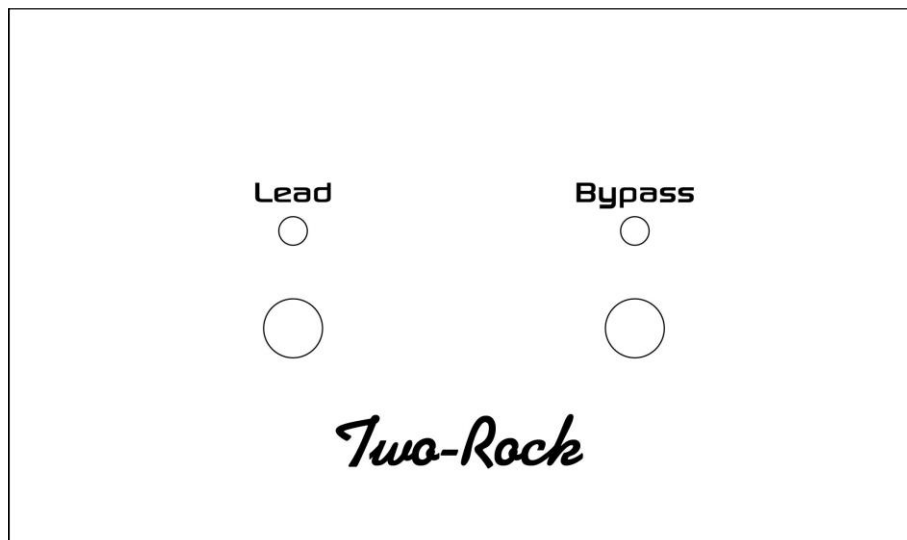

(Tube Complement)

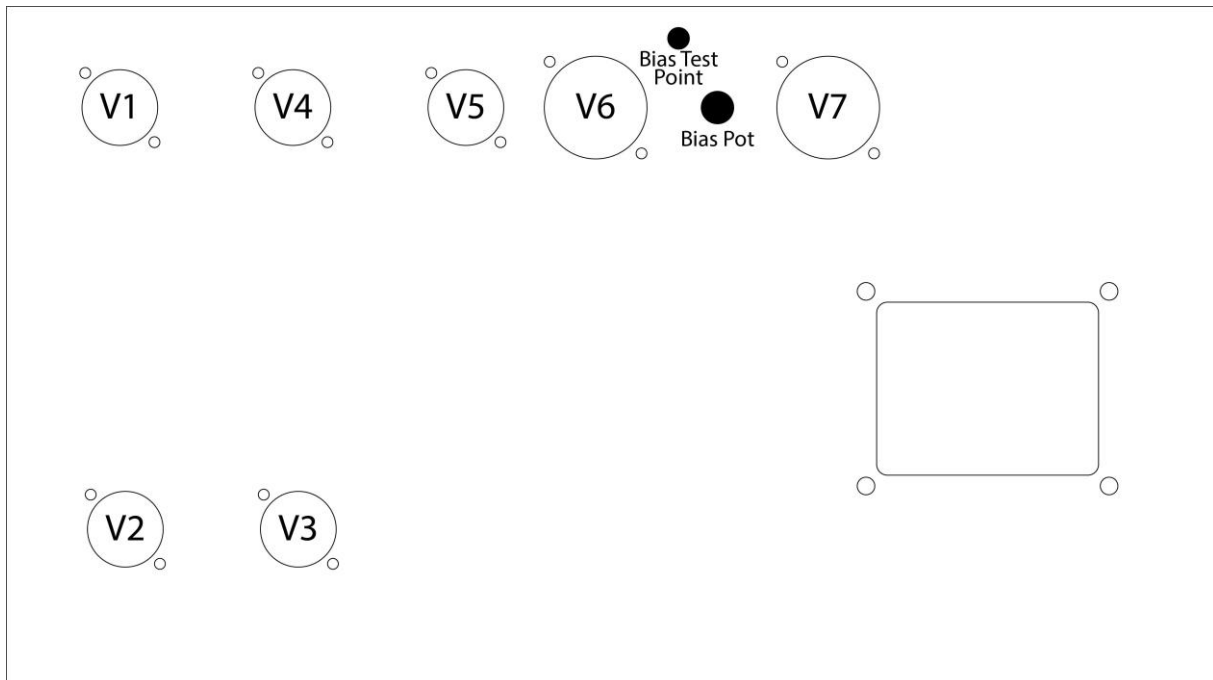

- V1- 12AX7, Rhythm channel
- V2- 12AX7, Mixing/Effects
- V3- 5751/12AT7, Reverb Driver
- V4- 12AX7, Lead Channel
- V5- 12AX7. Phase Inverter
- V6, V7- 6V6GC/6L6GC, Output

Each fine production tube is tested and matched to our exacting specifications. External bias adjustment and test points are located on the chassis near the output tube sockets. A digital voltmeter and small screwdriver are required for bias adjustment.

BIAS ADJUSTMENT PROCEDURE:

- Power up unit and connect proper speaker load**
- DO NOT have an instrument connected to the input during the biasing procedure!**
- Take unit off standby and allow a few seconds for the circuit to stabilize.**
- Set multi-meter to read DC Volts**
- With meter grounded to chassis and + probe inserted into test point, measure voltage.**
- Using a small flat head screwdriver, insert into Bias pot and turn slowly adjusting Bias level**

It is recommended to only use exact replacement tubes similar to what is installed at the factory. Be careful when deciding to install other types of 6L6, 6V6, or EL-34 based tubes. Not all have the same specs and some can't handle the plate voltage of the amplifier.

Below is a limited list of comparable tube types:

6L6: 6L6GC, 7581, 5881

6V6: 6V6S, 6V6GT

EL-34: 6CA7

**Bias Ranges: Are measured and set in Volts. But can be measured and set in milliamps.
Numbers given are for 2 or 4 tubes combined.**

**6L6 and EL-34 type tubes: .060V to .070V for 35watt and 50watt Factory Setting: .064V
.1200V to .1400V for 100watt Factory Setting:
.1260V**

6V6: Installed in the 22watt versions only: .044V to .058V Factory Setting: .050V

6V6: Installed in 22watt versions with tremolo, bias must not be set higher then .044V as it will cause tube failure.

Do not set bias higher then recommend levels as it can lead to tube failure or failure within the amplifier!

Two-Rock amplifiers are brought to you by Premier Builders Guild.

We know your new *Two-Rock* amplifier will provide many hours of enjoyment and inspiration in the years to come. This manual is a resource for some of your questions. Please contact us with any other questions or comments that you may have. We look forward to hearing from you!

PHONE: 1(707)584-TONE (8663) (M-F 9am-5pm PST)

FAX: 1(707)584-8661

**ADDRESS: Two-Rock
619 Martin Avenue, Suite 6
Rohnert Park, CA 94928**

SERVICE: service@two-rock.com

WEB: www.two-rock.com

PRECAUTIONS:

DO NOT expose to rain or any other moisture.

DO NOT use cleaning solvents. Wipe exterior with a clean, dry cloth only.

Refer servicing to a qualified service technician.

This is a product of
Premier Builders Guild

Two-Rock

619 MARTIN AVENUE, SUITE 6

ROHNERT PARK, CA 94928

707-584-8663

www.two-rock.com

SERIAL NUMBER: _____

Two-Rock

Guitar Amplification
619 Martin Ave. Ste 6
Rohnert Park, CA 94928
(707)584-8663



DECLARATION OF CONFORMITY
Report #R070212

We, Two-Rock Amplifiers, in coordination with CES Laboratories, declare, taking this declaration under our total responsibility, that the below models are in conformity with the provisions of the following EC Directive(s) when installed in accordance with the installation instructions contained in the product documentation:

2006/95/EEC	Low Voltage Directive
2004/108/EEC	EMC Directive
2011/65/EEC	RoHS-Directive

And that the standards and/or technical specifications have been applied to the following families of products:

Custom Reverb	Jet
Studio Pro	Sensor
Eric Gales	EXO-15
Classic Reverb	Bi-Onyx
TS-1	Classic Type Series
Gain Master	Matt Schofield

Signature:

Name and Title: Mac Skinner / General Manager

February 12, 2007

Approved By:
Chandra Garudachar
President
CES LABORATORIES

Prepared By:
Jyotsna Bedi
23361 Cypress Pt
Mission Viejo, CA 92692